

Cleaning instruction WMF 1300.

Please refer to WMF 1300 User manual.

- Prior to the first cleaning read the Care chapter in the User manual.
- Never reach under the spouts while cleaning the machine.

- Observe the overview of cleaning interval schedule in Care chapter in the User manual.
- Ensure that the mixer hose is replaced securely because hot liquid may escape.

<p>1</p> <p>* Touch clear pad</p>	<p>2</p> <p>Additional pads are activated.</p> <p>* Touch MENU</p>	<p>3</p> <p>* Touch (Care)</p>	<p>4</p> <p>The submenu (Care) appears.</p> <p>* Touch cleaning prog.</p>	<p>5</p> <p>* Touch switching off</p>
--	---	---------------------------------------	---	---

<p>6</p> <p>* Touch start</p> <p>The cleaning program starts.</p> <p> Caution. Never reach under the spouts while cleaning the machine.</p>	<p>7</p> <p>* Mix 5 ml of WMF Special cleaner with 17 US fl. oz (0.5 l) of lukewarm water</p> <p>* Insert milk hose</p>	<p>8</p> <p>When Step 7 completed:</p> <p>* Touch yes</p>	<p>9</p> <p>Foamer cleaning starts. Duration 30 seconds.</p>	<p>10</p> <p>* Prepare 10.2 US fl. oz (0.3 l) of clear, cold water</p> <p>* Insert milk hose</p>
--	--	---	---	---

<p>10.1</p> <p>* Touch yes</p> <p> Caution. Ensure that the mixer hose is replaced securely because hot liquid may escape.</p>	<p>11</p> <p>Rinsing starts. Duration 30 seconds.</p>	<p>12</p> <p>Display with foamer cleaning reminder appears. For foamer cleaning see next page, steps A to C.</p> <p>* Touch ok</p>	<p>13</p> <p>Mixer cleaning starts. Duration 30 seconds.</p>	<p>14</p> <p>* Touch start</p>
---	--	--	---	--


- Attention. Machines without connection to main drainage.** Prior to cleaning, place an appropriate container under the combi spout. Prior to cleaning, the drip tray must be emptied.

<p>15</p> <p>* Push combi spout fully upwards</p>	<p>16</p> <p>* Remove and empty grounds container</p> <p> Caution. Never reach into the brewing unit.</p>	<p>17</p> <p>* Pull drip tray out and empty it</p>	<p>18</p> <p>* Replace grounds container</p> <p>* Replace drip tray</p>
--	---	---	--

Continue on reverse side.



19

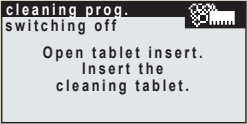


The manual insert is located in the center between the product hoppers.

20




- * Open the manual insert lid
- * Add a special WMF cleaning tablet

21

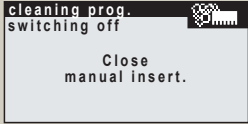

- * Close the manual insert lid

22

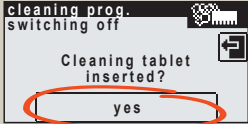

Cleaning tablet inserted?


- * Touch **yes**

23



Machine cleaning starts. Duration 6 - 8 minutes.

24



Step 6 to 12:
Only if beverages containing milk have been previously prepared.


Step 13:
Only if beverages containing choc components have been previously prepared with the optional mixer.

! **Foamer cleaning:** For interim cleaning see below "foamer cleaning".
Combi spout cleaning without Plug&Clean: Perform at least **once per day**. See below.

Combi spout cleaning at least 1 x daily

Prior to cleaning switch off at ON/OFF button. Disconnect mains plug.

A




- * Pull forward the lever behind the combi spout
- * Remove combi spout
- * Remove milk hose from milk container and release from combi spout

If a mixer is fitted:

- * Release the mixer hose

! **Caution.**
Carefully disconnect the milk hose.

B



- * Then immerse the rest of the hose in the cleaning solution while moving along the hose's length

This prevents air bubbles from staying in the hose.

- * Soak all parts of combi spout in the cleaning solution


If a mixer is fitted:

- * Soak mixer hose in the cleaning solution

All parts must be completely immersed.

- * After 5 hours clean all parts thoroughly with a brush

C



- * Rinse combi spout and milk hose very thoroughly with clear water so that no cleaning fluid remains


If a mixer is fitted:

- * Rinse mixer hose very thoroughly
- * Reassemble combi spout
- * Replace combi spout
- * Insert milk hose


If a mixer is fitted:

- * Insert mixer hose

Foamer cleaning

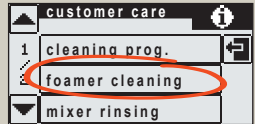


Foamer cleaning only


- * On submenu  (Care) touch **foamer cleaning**

See steps 6 to 10.

Mixer rinsing

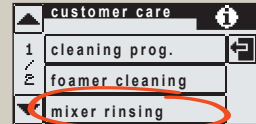

Mixer rinsing only

- * On submenu  (Care) touch **mixer rinsing**

Duration 30 seconds.