




WMF 5000S Utility Specifications

Models: WMF 5000S with Frontloader

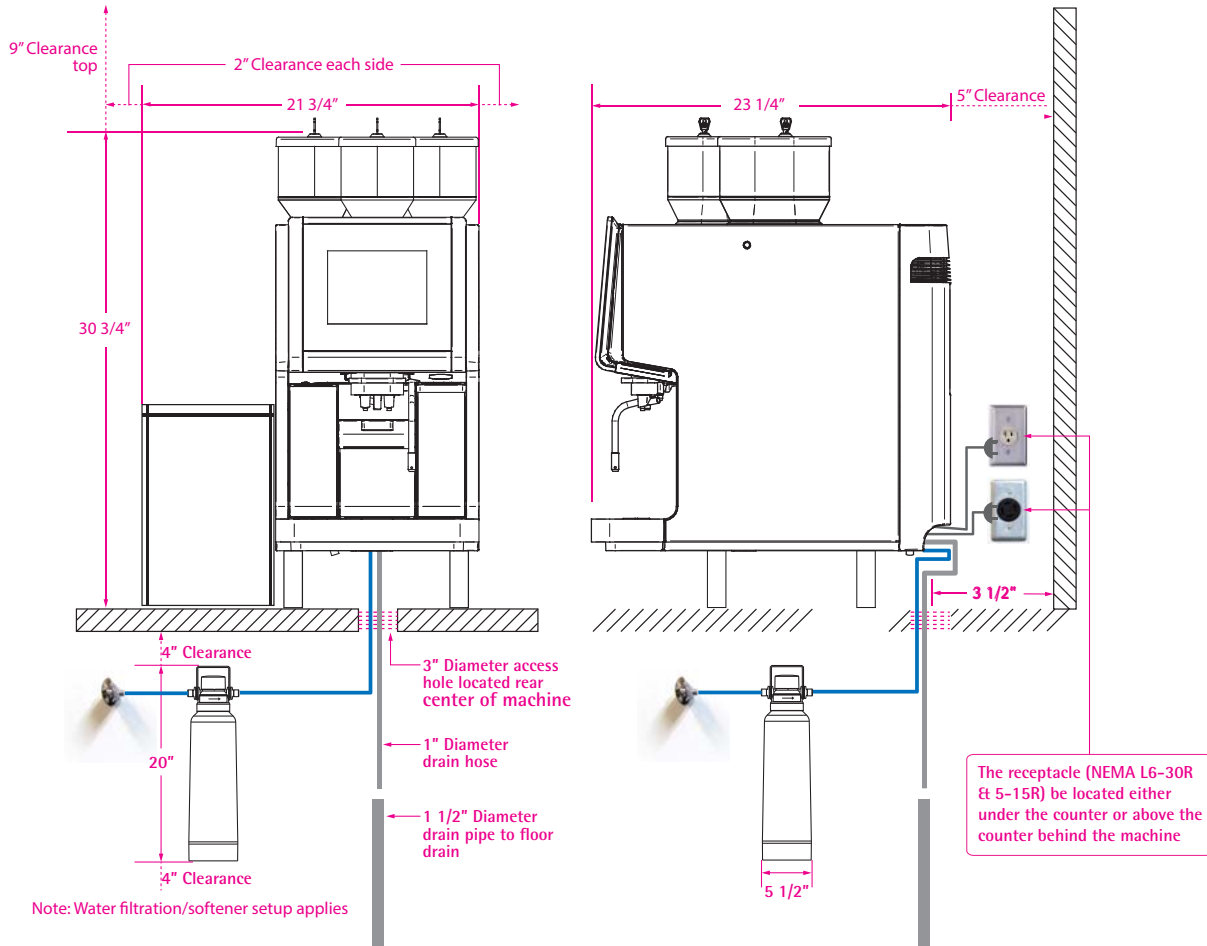

Note: Hoppers & steam wand configuration may vary depending on model.

POWER, WATER SUPPLY, AND ACCESS REQUIREMENTS

| | |
|--|--|
| | <ul style="list-style-type: none"> Machine receptacle type: NEMA L6-30R 3 Prong twist-lock Breaker panel: 30 Amp dedicated 220V single phase circuit Actual maximum load: 24 Amps |
| | <ul style="list-style-type: none"> Cooler receptacle type: NEMA 5-15R or 5-20R |
| | <ul style="list-style-type: none"> 3" diameter access hole with collar (no sharp edges) Located centrally behind machine for water, drain hose and electrical <p>Note: Access hole is only required if any of the utility hook-ups are located under the counter.</p> |
| | <ul style="list-style-type: none"> Water shut-off valve with 3/8" compression fitting Back flow preventer in accordance with local requirements Water pressure requirement between 29-87 PSI (2-6 bar) |
| | <ul style="list-style-type: none"> Drain pipe to floor drain Copper or PVC in accordance with local health codes and regulations Diameter: 1 1/2" or larger |



The receptacle, water shut-off valve and drain pipe must be within 3 feet (36") of the center of the location (footprint) of the machine.

Ideal under counter space for softener: 30" (minimum requirement: 28").